



CONTROL TEST

Complete ONE ONLY negative result control test (this will be referred to as a “Blank” test to compare against the surface tests):

Simply unscrew the whitecap off the top of the blue bottle.


GENTLY squeeze the bottle and add four drops of the buffer solution to the cassette in the area marked “S” at 5-second intervals between drops.

Note: This will show a result of NO signs at all of Methamphetamine present in the cassette - the “T” line will appear lighter than the “C” line)


SCREENING AN AREA

Nitrile gloves are to be used between each screening test conducted to eliminate the possibility of cross contamination.


1




Place a template card on surface to be screened.




2



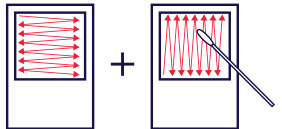
Unscrew the blue top from the buffer solution bottle and using the wand, wet the cotton bud in the buffer solution or dip cotton bud into the bottle to wet.




3



Using the side of the cotton bud, gently wipe the bud on the testing surface, making sure to swab the entire area inside the template square, as shown in the diagrams below




4



Re-immerses the cotton bud in the buffer solution rotating the stem of the cotton bud between the fingers for ten seconds. Remove the cotton bud.

Repeat step 3 & 4 if needed.



5



Replace the blue lid on the buffer solution bottle tightly & shake thoroughly for 20 seconds.



6

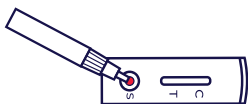


Take the cassette out of the wrapping & place on a level surface. (disregard other items inside packaging of cassette).

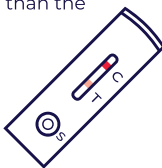


7

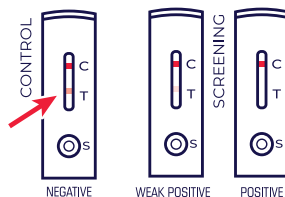
Unscrew the white cap off the top of the blue bottle. GENTLY squeeze the bottle and add four drops of the buffer solution to the cassette in are marked "S" at 5 second intervals between drops.

**8**

Wait until the red lines appear
- Between 30 seconds and 5 minutes. The T line will be lighter than the C Line

**9**

Now compare the screening test just completed to the control test.

**10**

If the "T" line appears fainter in any way compared to the Blank tests "T" line, further laboratory testing is recommended.

If the "T" line does not show at all, this means the level of Methamphetamine found on the sampled area is higher than 0.5ug and further laboratory testing is required. Call 1800 522 837.

If no "C" line shows, the test is invalid.

NEXT STEP: If your instant test shows a positive result call **METH TESTING SOLUTIONS** to discuss what to do next & arrange detailed Laboratory testing

METHTESTING
SOLUTIONS

1800 522 837
1800 LAB TEST

NOTES:

- Not suitable for screen of carpet or fabric (or any other non-solid surfaces)
- Not recommended for screening over freshly painted area
- Not to be used to clear a property after decontamination
- Storage - between 4-30 degrees - not in fridge. Keep out of reach of children
- Disposal - double bag and place in a rubbish bin out of reach of children
- The results are for the area screened only, not to eliminate the possibility that Methamphetamine may be present in other areas of the same room
- The manufacture states accuracy of screening test is: Negative: 99.38%, Positive: 97.45%



WATCH A LIVE DEMONSTRATION VIDEO
www.methtestingkits.com.au/instructions